


© TOYOTA MOTOR SALES CO., LTD. Printed in Japan NO. 9883

Note:
When reading the wiring diagram, following should be noted.
1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S. THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK O = ORANGE W = WHITE
G = GREEN R = RED Y = YELLOW
L = LIGHT BLUE
EXAMPLE: RG, IS FOR RED AND A GREEN LINE.
2. LEGEND IN THE BRACKET () OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIOUS MODELS OR OPTIONAL EQUIPMENT.

ELECTRICAL WIRING DIAGRAM (For U.S.A. & CANADA) - 1975 Model CELICA No. 98833

GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
F-2	ALTERNATOR	E-23	WASHER
D-18	ANTENNA (OPT)	F-23	WIPER
D-3	BATTERY	D-18	RADIO (OPT)
D-8	CIGARETTE LIGHTER	E-19	RADIO CONDENSER
E-9	CLOCK	F-2	REGULATOR
C-5	COMBINATION METER	G-20	RESISTOR
D-8	DEFOGGER, REAR WINDOW		RELAYS:
E-20	DISTRIBUTOR	C-8	DEFOGGER
	EMISSION CONTROL SYSTEM:	G-19	FUEL PUMP
E-21	EMISSION CONTROL COMPUTER	F-17	HEAD LIGHT CONTROL
F-22	INSPECTION CONNECTOR	D-13	HORN
F-21	SPEED SENSOR	G-6	LEVEL WARNING
F-21	THERMO SW For Coolant	C-2	STARTER
D-12	THERMO SENSOR For CCo (Calif.)		SEAT BELT SYSTEM:
O-21	VACUUM SWITCHING VALVE	G-11	BUZZER, COMBINATION
E-14	FLASHER, TURN SIGNAL & HAZARD	D-11	CANCEL SWITCH, (Ex. Canada)
G-20	FUEL CUT SOLENOID	G-9	G. SENSOR
E-5	FUEL GAUGE	E-9	INSPECTION CONNECTOR
H-19	FUEL PUMP	E-9	LOCKING SOLENOID
E-6	FUEL SENDER	F-9	PARKING BRAKE (For M/T) or NEUTRAL SAFETY (For A/T) SW
B-5	FUSE BOX	E-11	RETRACTOR S/W, DRIVER SIDE (Ex. Canada)
O-3	FUSIBLE LINK	D-12	RETRACTOR S/W, DRIVER SIDE (For Canada)
G-13	HORNS, LO - HI	E-11	RETRACTOR S/W, PASSENGER SIDE (Ex. Canada)
E-20	IGNITER	E-12	RETRACTOR S/W, PASSENGER SIDE (For Canada)
D-20	IGNITION COIL	D-9	SEAT BELT COMPUTER
E-8	INSPECTION SOCKET	G-10	SEAT BELT WARNING LIGHT
	LIGHTS:	E-10	SEAT S/W, DRIVER SIDE (Ex. Canada)
E-16	AMMETER & OIL	D-12	SEAT S/W, DRIVER SIDE (For Canada)
F-7	BACK-UP, LH - RH	E-10	SEAT S/W, PASSENGER SIDE (Ex. Canada)
E-6	BACK-UP, LH - RH	E-12	SEAT S/W, PASSENGER SIDE (For Canada)
E-16	BRAKE WARNING		STEREO TAPE PLAYER (OPT)
E-16	CLOCK	E-18	SPEAKER
E-6	DISCHARGE WARNING		SWITCHES:
F-8	DOOR COURTESY	E-7	BACK-UP LIGHT
D-22	EXH. TEMP WARNING	H-6	BRAKE OIL LEVEL WARNING
D-16	FUEL	G-6	BRAKE WARNING LIGHT
E-17	FUEL	D-7	DEFOGGER
F-16	HAZARD WARNING	F-16	DIMMER
H-16	HEADLIGHT, LH - RH	H-9	DOOR
E-16	HEATER CONTROL	D-14	HAZARD WARNING LIGHT
F-16	HIGH BEAM INDICATOR	E-17	GLOVE BOX LIGHT
G-9	INTERIOR	D-17	LIGHT CONTROL
E-15	LICENSE PLATE	H-7	HEATER BLOWER MOTOR
C-5	MAINTENANCE WARNING	E-13	HORN
D-15	MARKER, FRONT SIDE, LH - RH	B-1	IGNITION
D-15	MARKER, REAR SIDE, LH - RH	G-9	INTERIOR LIGHT
E-17	NEUTRAL SAFETY S/W INDICATOR	C-6	MAINTENANCE WARNING CANCEL
E-5	OIL PRESSURE WARNING	C-6	MICRO
G-14	PARKING, LH - RH	B-2	NEUTRAL SAFETY
D-16	PANEL	G-6	OIL PRESSURE
D-16	SPEEDOMETER	D-17	PANEL LIGHT CONTROL
H-4	STOP, LH - RH	F-4	PARKING BRAKE LIGHT
F-15	TAIL, LH - RH	F-4	STOP LIGHT
D-16	TACHOMETER	F-14	TURN SIGNAL
G-13	TURN SIGNAL, FRONT, LH	F-11	UNLOCK WARNING
G-14	TURN SIGNAL, FRONT, RH	D-23	WINDSHIELD WIPER AND WASHER
G-13	TURN SIGNAL, REAR, LH		
H-13	TURN SIGNAL, REAR, RH	D-5	TACHOMETER
H-13	TURN SIGNAL INDICATOR, LH	F-5	WATER TEMPERATURE GAUGE
H-14	TURN SIGNAL INDICATOR, RH	F-6	WATER TEMPERATURE SENDER
E-16	WATER TEMP		
E-16	WIPER SWITCH		
F-7	MOTORS:		
D-2	HEATER BLOWER		
	STARTER		

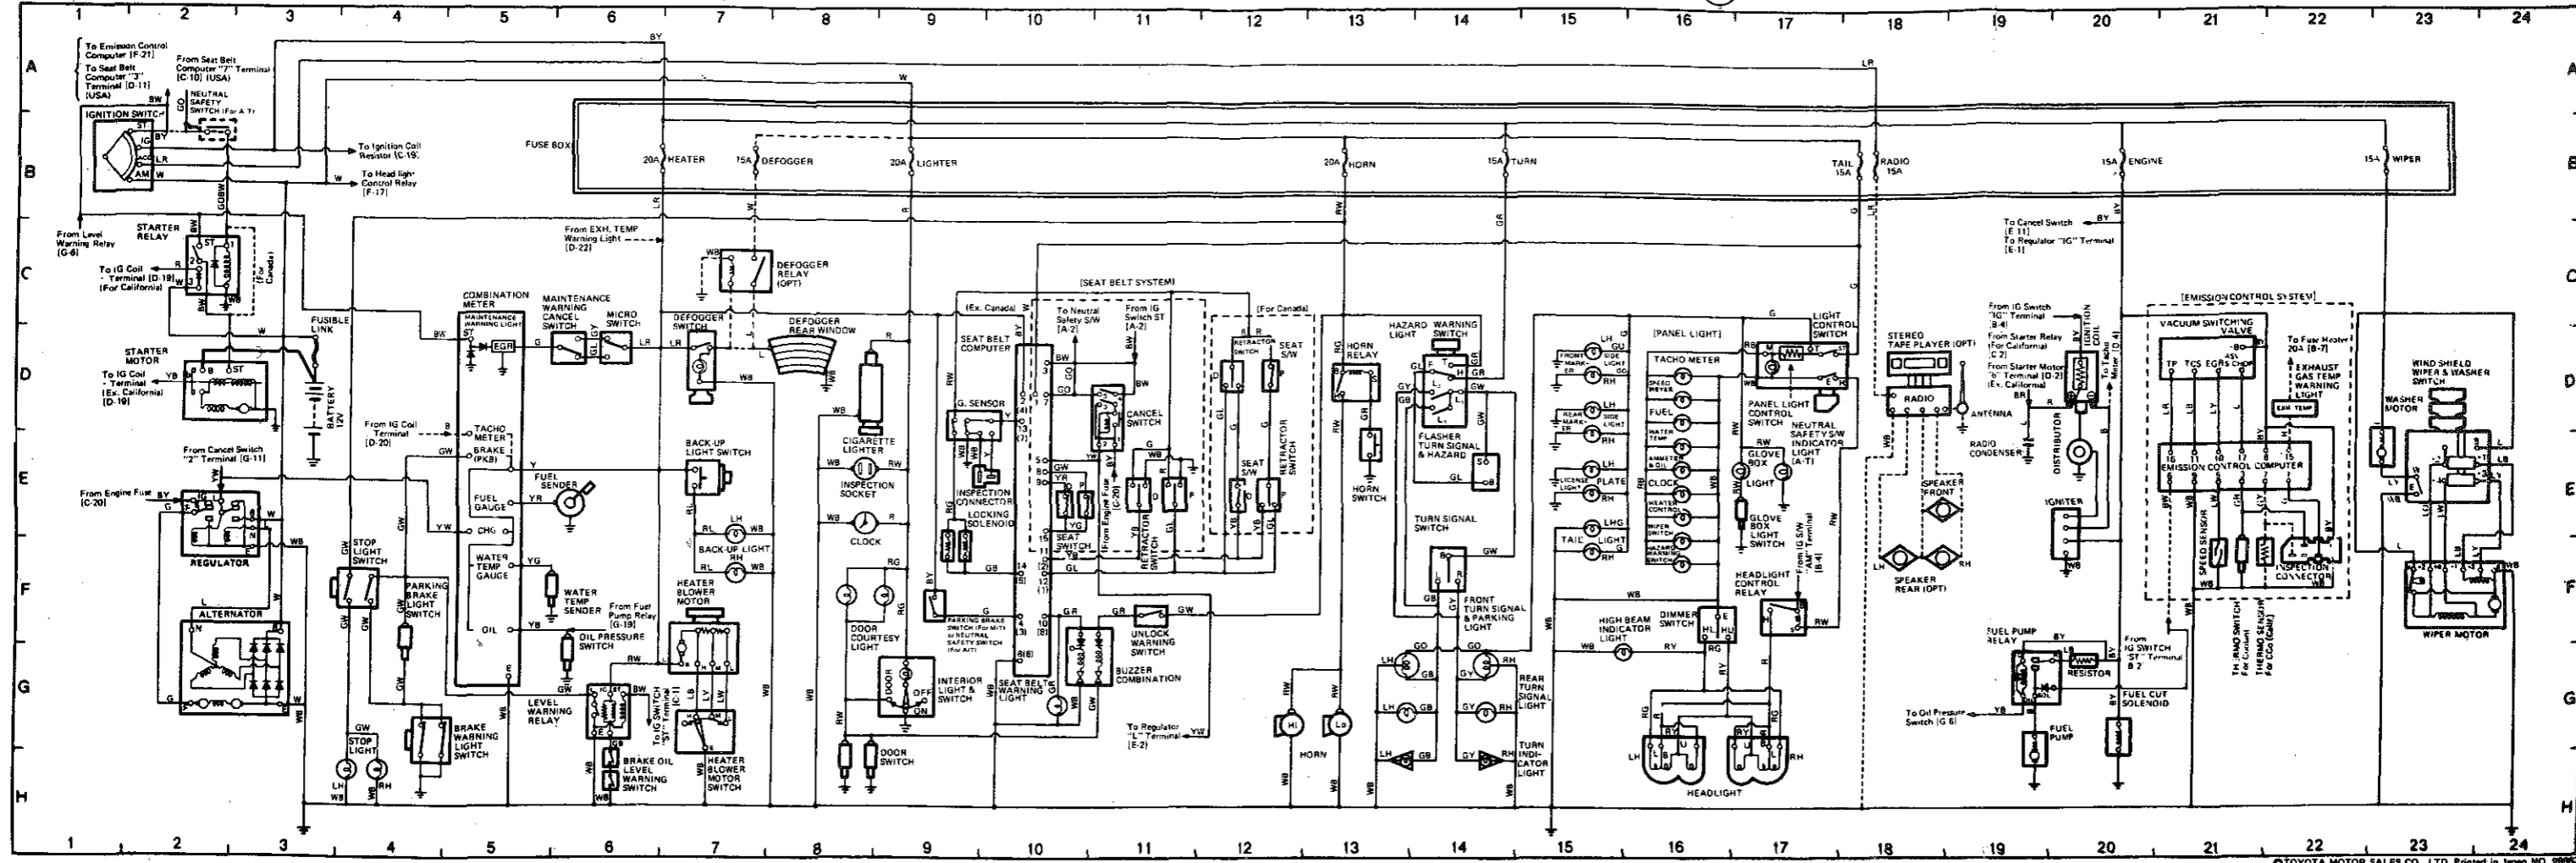

© TOYOTA MOTOR SALES CO., LTD. Printed in Japan NO. 98883

Notes:
 1. When reading the wiring diagram, following should be noted.
 WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTERS.
 THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
 B = BLACK
 G = GREEN
 L = LIGHT BLUE
 O = ORANGE
 R = RED
 W = WHITE
 Y = YELLOW
 EXAMPLE: RG IS FOR RED AND A GREEN LINE.
 2. LEGEND IN THE BRACKET () OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
 3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIOUS MODELS OR OPTIONAL EQUIPMENT.

ELECTRICAL WIRING DIAGRAM (For U.S.A. & CANADA) - 1975 Model CELICA No. 98883

GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
F-2	ALTERNATOR	E-23	WASHER
D-18	ANTENNA (OPT)	F-23	WIPER
D-3	BATTERY	D-18	RADIO (OPT)
D-8	CIGARETTE LIGHTER	E-19	RADIO CONDENSER
E-8	CLOCK	F-7	REGULATOR
C-5	COMBINATION METER	G-20	RESISTOR
D-8	DEFOGGER, REAR WINDOW		RELAYS:
E-20	DISTRIBUTOR	C-8	DEFOGGER
	EMISSION CONTROL SYSTEM:	G-19	FUEL PUMP
E-21	EMISSION CONTROL COMPUTER	F-17	HEAD LIGHT CONTROL
F-22	INSPECTION CONNECTOR	D-13	HORN
F-21	SPEED SENSOR	G-6	LEVEL WARNING
D-12	THERMO S/W For Coolant	C-2	STARTER
O-21	THERMO SENSOR For CCo (Calif.)		SEAT BELT SYSTEM:
E-14	VACUUM SWITCHING VALVE	G-11	BUZZER, COMBINATION
E-14	FLASHER, TURN SIGNAL & HAZARD	D-11	CANCEL SWITCH, (Ex. Canada)
G-20	FUEL CUT SOLENOID	O-9	G SENSOR
E-5	FUEL GAUGE	E-9	INSPECTION CONNECTOR
H-19	FUEL PUMP	E-9	LOCKING SOLENOID
E-5	FUEL SENDER	F-8	PARKING BRAKE (For M/T) or NEUTRAL SAFETY (For A/T) S/W
B-5	FUSE BOX	E-11	RETRACTOR S/W, DRIVER SIDE (Ex. Canada)
D-3	FUSIBLE LINK	D-12	RETRACTOR S/W, DRIVER SIDE (For Canada)
G-13	HORNS, LO - HI	E-11	RETRACTOR S/W, PASSENGER SIDE (Ex. Canada)
E-20	IGNITER	E-12	RETRACTOR S/W, PASSENGER SIDE (For Canada)
D-20	IGNITION COIL	D-9	SEAT BELT COMPUTER
E-8	INSPECTION SOCKET	G-10	SEAT BELT WARNING LIGHT
	LIGHTS:	E-10	SEAT S/W, DRIVER SIDE (Ex. Canada)
E-16	AMMETER & OIL	D-12	SEAT S/W, DRIVER SIDE (For Canada)
F-7	BACK-UP, LH - RH	E-10	SEAT S/W, PASSENGER SIDE (Ex. Canada)
E-5	BACK-UP, LH - RH	E-12	SEAT S/W, PASSENGER SIDE (For Canada)
E-16	BRAKE WARNING		STEREO TAPE PLAYER (OPT)
E-16	CLOCK	E-18	SPEAKER
E-5	DISCHARGE WARNING		SWITCHES:
F-8	DOOR COURTESY	E-7	BACK-UP LIGHT
D-22	EXH. TEMP WARNING	H-6	BRAKE OIL LEVEL WARNING
D-16	FUEL	G-5	BRAKE WARNING LIGHT
E-17	GLOVE BOX	D-7	DEFOGGER
F-16	HAZARD WARNING	F-16	DIMMER
H-16	HEADLIGHT, LH - RH	H-9	DOOR
E-16	HEATER CONTROL	D-14	HAZARD WARNING LIGHT
F-16	HIGH BEAM INDICATOR	E-17	GLOVE BOX LIGHT
G-9	INTERIOR	D-17	LIGHT CONTROL
E-15	LICENSE PLATE	H-7	HEATER BLOWER MOTOR
C-5	MAINTENANCE WARNING	E-13	HORN
D-15	MARKER, FRONT SIDE, LH - RH	B-1	IGNITION
D-15	MARKER, REAR SIDE, LH - RH	G-9	INTERIOR LIGHT
E-17	NEUTRAL SAFETY S/W INDICATOR	C-6	MAINTENANCE WARNING CANCEL
F-5	OIL PRESSURE WARNING	C-6	MICRO
G-14	PARKING, LH - RH	B-2	NEUTRAL SAFETY
D-16	SPEEDOMETER	G-6	OIL PRESSURE
H-4	TAIL, LH - RH	D-17	PANEL LIGHT CONTROL
F-15	TAIL, LH - RH	F-4	PARKING BRAKE LIGHT
D-16	TACHOMETER	F-4	STOP LIGHT
G-13	TURN SIGNAL, FRONT, LH	F-14	TURN SIGNAL
G-14	TURN SIGNAL, FRONT, RH	F-11	UNLOCK WARNING
G-13	TURN SIGNAL, REAR, LH	D-23	WINDSHIELD WIPER AND WASHER
G-14	TURN SIGNAL, REAR, RH		
H-13	TURN SIGNAL INDICATOR, LH		
H-14	TURN SIGNAL INDICATOR, RH		
E-16	WATER TEMP		
E-16	WIPER SWITCH		
	MOTORS:		
F-7	HEATER BLOWER		
D-2	STARTER		