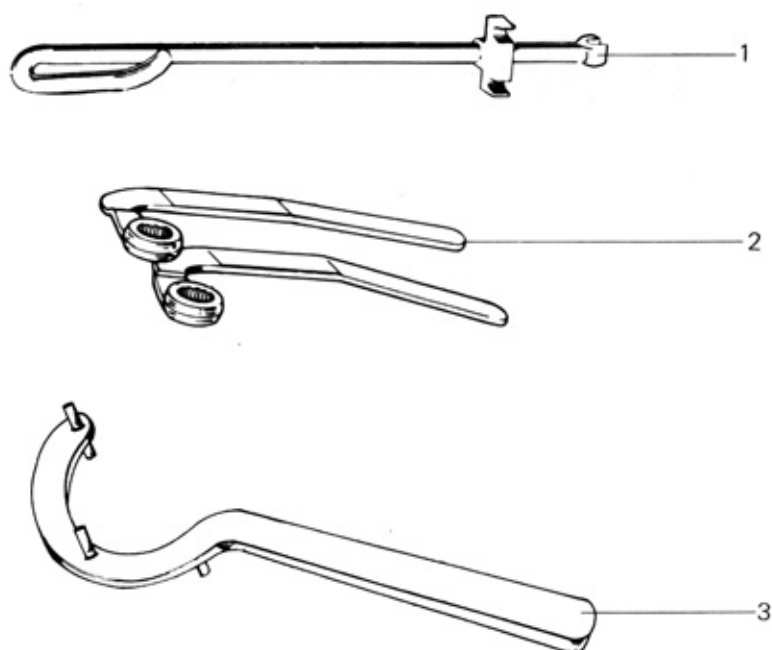


SST (SPECIAL SERVICE TOOL)

	Page
SST (SPECIAL SERVICE TOOL)	4-2

SST (SPECIAL SERVICE TOOL)

- | | | |
|---|-------------|--------------------------------|
| 1 | 09804-13021 | Back door torsion spring tool |
| 2 | 09812-14010 | Door hinge set bolt wrench set |
| 3 | 09808-12010 | Fuel gauge wrench |

Fig. 4-1 SST Used for Body Servicing

WIRING DIAGRAM

EXCEPT U.S.A. & CANADA


COMPONENTS	GRID LOCATION	COMPONENTS	GRID LOCATION
ALTERNATOR AMMETER	D-1 B-3	TURN SIGNAL INDICATOR, LH,RH.	D-8
BATTERY	C-3	MOTORS: HEATER BLOWER STARTER WASHER (For HEADLIGHT CLEANER) WINDSHIELD WASHER WINDSHIELD WIPER WIPER (For HEADLIGHT CLEANER)	D-6 B-1 D-10 C-10 D-9 D-10
CIGARETTE LIGHTER CLOCK COMBINATION METER	E-15 D-14 B-3	OIL PRESSURE GAUGE OIL PRESSURE SENDER	D-3 E-4
DEFOGGER, REAR WINDOW DISTRIBUTOR	D-5 C-5	RADIO RADIO NOISE SUPPRESSOR REGULATOR	B-14 E-5 C-1
FLASHER, TURN SIGNAL & HAZARD FUEL CUT SOLENOID FUEL GAUGE FUEL SENDER FUSE BOX FUSE, EXTERNAL FUSE, EXTERNAL (For DEFOGGER) FUSES, EXTERNAL (For Ammeter) FUSIBLE LINKS FUSIBLE LINK, SHOUNT (For Ammeter)	B-7 B-5 D-3 D-4 A-3 C-2 C-5 B-3 B-3 B-3	RELAYS: DEFOGGER HEAD & TAIL LIGHT HEADLIGHT CLEANER CONTROL STARTER STOP LAMP BULB FAILURE	C-5 B-12 B-10 B-2 D-7
HEADLIGHT CLEANER HORNS, LO,HI.	B-10 B-7	SPEAKER, FRONT SPEAKER, REAR LH,RH. STEREO TAPE PLAYER	C-14 C-13 B-14
IGNITION COIL	C-5	SWITCHES: BACK-UP LIGHT BRAKE WARNING LIGHT DEFOGGER, REAR WINDOW DIMMER DOOR HAZARD WARNING LIGHT HEADLIGHT HEATER BLOWER MOTOR HORN IGNITION INTERIOR LIGHT NEUTRAL SAFETY OIL PRESSURE PANEL LIGHT CONTROL PARKING BRAKE SPOT LIGHT STOP LIGHT STOP LIGHT (For WARNING LIGHT) TURN SIGNAL WINDSHIELD WIPER & WASHER	E-4 E-3 B-5 D-14 C-15 B-8 D-12 E-6 C-7 A-1 B-15 A-2 E-4 C-11 D-3 E-15 D-7 D-3 C-8 C-9
LIGHTS: AUTOMATIC TRANSMISSION INDICATOR ASHTRAY BACK-UP, LH,RH. BRAKE WARNING CLOCK COMBINATION METER DISCHARGE WARNING FUEL REMAINING WARNING HAZARD RED INDICATOR HEADLIGHT, LH,RH. HEATER CONTROL HIGH BEAM INDICATOR INTERIOR LICENSE PLATE LIGHT SWITCH REMINDER LOW OIL PRESSURE INDICATOR PARKING, LH,RH. SPOT STOP, LH,RH. STOP LAMP BULB FAILURE WARNING TAIL, LH,RH. TURN SIGNAL, LH. Front, Side & Rear TURN SIGNAL, RH. Front, Side & Rear	D-11 D-11 E-4 C-3 D-11 C-11 C-3 D-3 C-7 F-13 C-11 E-13 B-15 F-12 C-3 D-3 F-11 E-15 F-7 E-7 F-11 E-8 E-8	TACHOMETER WATER TEMPERATURE GAUGE WATER TEMPERATURE SENDER	C-3 D-3 D-4

— Note —

When reading the wiring diagram, following should be noted.

1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B=BLACK O=ORANGE W=WHITE
G=GREEN R=RED Y=YELLOW
L=LIGHT BLUE
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
2. LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPPMENT.

EXCEPT U.S.A. & CANADA

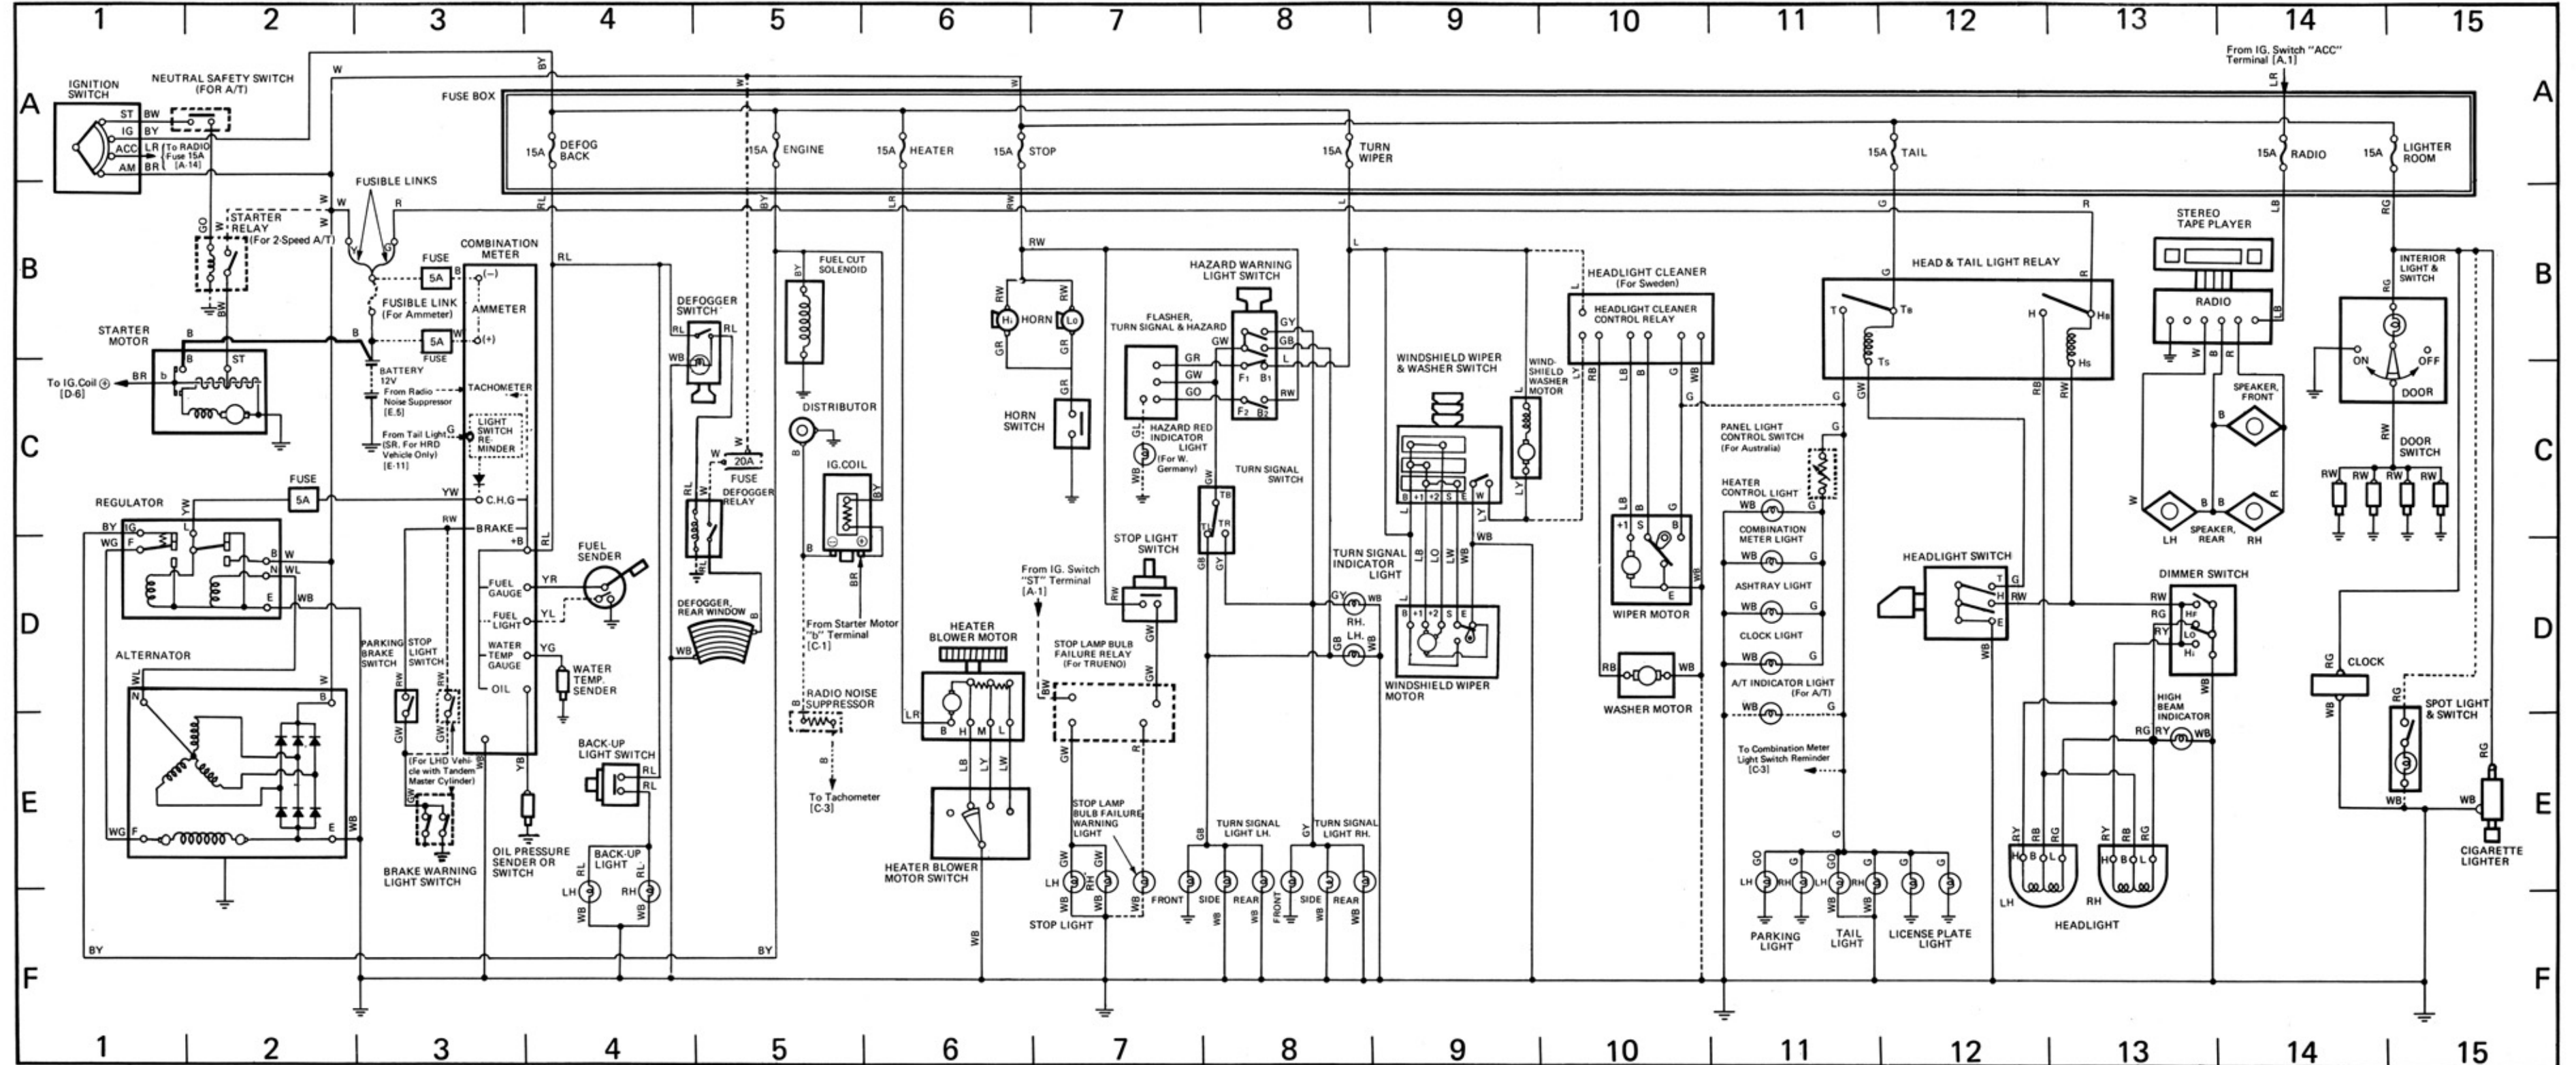

WIRING DIAGRAM

FOR U.S.A. & CANADA


COMPONENTS	GRID LOCATION	COMPONENTS	GRID LOCATION
ALTERNATOR	F-2	STARTER	C-2
AMMETER	C-4	WINDSHIELD WASHER, Front	C-11
AUTOMATIC CHOKE	G-13	WINDSHIELD WASHER, Rear	E-13
BATTERY	C-3	WINDSHIELD WIPER, Front	E-12
BUZZER, COMBINATION	F-7	WINDSHIELD WIPER, Rear	F-12
CIGARETTE LIGHTER	G-19	OIL PRESSURE GAUGE	F-4
CLOCK	F-18	OIL PRESSURE SENDER	G-4
COMBINATION METER	B-4	RADIO	C-18
DEFOGGER, REAR WINDOW	E-5	RADIO NOISE SUPPRESSOR	D-15
DISTRIBUTOR	E-15	REGULATOR	E-2
DISTRIBUTOR, DUAL POINTS	D-14	RELAYS:	
EMISSION CONTROL SYSTEM:	B-16	CHOKE CONTROL	F-13
EMISSION CONTROL COMPUTER (Except California)	C-16	DEFOGGER	D-5
EMISSION CONTROL COMPUTER (For California)	E-16	FUEL PUMP (For California)	F-14
EXH. TEMP WARNING LIGHT (For California)	D-4	HEAD & TAIL LIGHT	C-21
INSPECTION CONNECTOR (For California)	G-15	HORN	C-9
SPEED SENSOR	G-17	IGNITION CONTROL, DUAL POINTS	D-14
THERMO SENSOR For CCo (For California)	F-16	STARTER	B-2
THERMO SWITCH at INTAKE MANIFOLD (For California)	F-16	STOP LAMP BULB FAILURE	E-10
THERMO SWITCH at RADIATOR (For California)	F-15	SEAT BELT SYSTEM:	B-8
VACUUM SWITCHING VALVE (Except California)	C-16	BUZZER, COMBINATION	F-7
VACUUM SWITCHING VALVE (For California)	D-16	CANCEL SWITCH, STARTER INTERLOCK (Except Canada)	D-7
FLASHER, TURN SIGNAL & HAZARD	C-10	G. SENSOR (DECELERATION SENSOR)	D-6
FUEL CUT SOLENOID	C-13	INSPECTION CONNECTOR	E-6
FUEL GAUGE	E-4	LOCKING SOLENOID	E-6
FUEL PUMP (For California)	G-14	PARKING BRAKE or NEUTRAL SAFETY SWITCH	F-6
FUEL PUMP RESISTOR (For California)	F-14	RETRACTOR SWITCH, DRIVER SIDE (Except Canada)	D-8
FUEL SENDER	E-5	RETRACTOR SWITCH, DRIVER SIDE (For Canada)	C-8
FUSE BOX	B-4	RETRACTOR SWITCH, PASSENGER SIDE (Except Canada)	D-8
FUSE, EXTERNAL	D-2	RETRACTOR SWITCH, PASSENGER SIDE (For Canada)	D-9
FUSE, EXTERNAL (For DEFOGGER)	D-5	SEAT BELT COMPUTER	C-6
FUSES, EXTERNAL (For Ammeter)	C-3	SEAT BELT WARNING LIGHT	G-7
FUSIBLE LINKS	B-3	SEAT SWITCH, DRIVER SIDE (Except Canada)	E-7
FUSIBLE LINK, SHUNT (For Ammeter)	C-3	SEAT SWITCH, DRIVER SIDE (For Canada)	D-8
HORNS, L.O., H.I.	G-9	SEAT SWITCH, PASSENGER SIDE (Except Canada)	E-7
IGNITION COIL	C-15	SEAT SWITCH, PASSENGER SIDE (For Canada)	C-9
IGNITER	C-14	SPEAKER, FRONT	D-18
LIGHTS:		SPEAKER, REAR L.H., R.H.	E-18
ASHTRAY	E-20	STEREO TAPE PLAYER	C-18
AUTOMATIC TRANSMISSION INDICATOR	F-20	SWITCHES:	
BACK-UP, L.H., R.H.	G-5	BACK-UP LIGHT	F-5
BRAKE WARNING	D-4	BRAKE WARNING LIGHT	G-4
CLOCK	E-20	DEFOGGER, REAR WINDOW	C-5
COMBINATION METER	D-20	DIMMER	E-22
DISCHARGE WARNING	D-4	DOOR	D-19
FUEL REMAINING WARNING (for California)	E-4	HAZARD WARNING LIGHT	C-10
HEADLIGHT, L.H., R.H.	G-21	HEADLIGHT	E-21
HEATER CONTROL	F-20	HEATER BLOWER MOTOR	G-18
HIGH BEAM INDICATOR	F-22	HORN	D-9
INTERIOR	C-19	IGNITION	B-1
LICENSE PLATE	G-21	INTERIOR LIGHT	C-19
LOW OIL PRESSURE WARNING	F-4	NEUTRAL SAFETY	A-2
MARKER, FRONT SIDE, L.H., R.H.	G-20	OIL PRESSURE	G-4
MARKER, REAR SIDE, L.H., R.H.	G-20	PANEL LIGHT CONTROL	F-20
PARKING, L.H., R.H.	G-19	PARKING BRAKE	F-3
SPOT LAMP	F-19	SPOT LIGHT	F-19
STOP, L.H., R.H.	G-9	STOP LIGHT	E-10
STOP LAMP BULB FAILURE WARNING	G-10	STOP LIGHT (For WARNING LIGHT)	F-4
TAIL, L.H., R.H.	G-20	THERMO (For Dual Point)	E-13
TURN SIGNAL, L.H. Front & Rear	G-10	TURN SIGNAL	D-10
TURN SIGNAL, R.H. Front & Rear	G-11	UNLOCK WARNING	F-8
TURN SIGNAL INDICATOR, L.H., R.H.	E-11	WINDSHIELD WIPER AND WASHER, Front	C-12
MOTORS:		WINDSHIELD WIPER AND WASHER, Rear	F-13
HEATER BLOWER	E-17	TACHOMETER	D-4
		WATER TEMPERATURE GAUGE	F-4
		WATER TEMPERATURE SENDER	F-4

Note -

When reading the wiring diagram, following should be noted.

1. **WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.**
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B=BLACK O=ORANGE W=WHITE
G=GREEN R=RED Y=YELLOW
L=LIGHT BLUE
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
2. **LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.**
3. **BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.**

FOR U.S.A. & CANADA

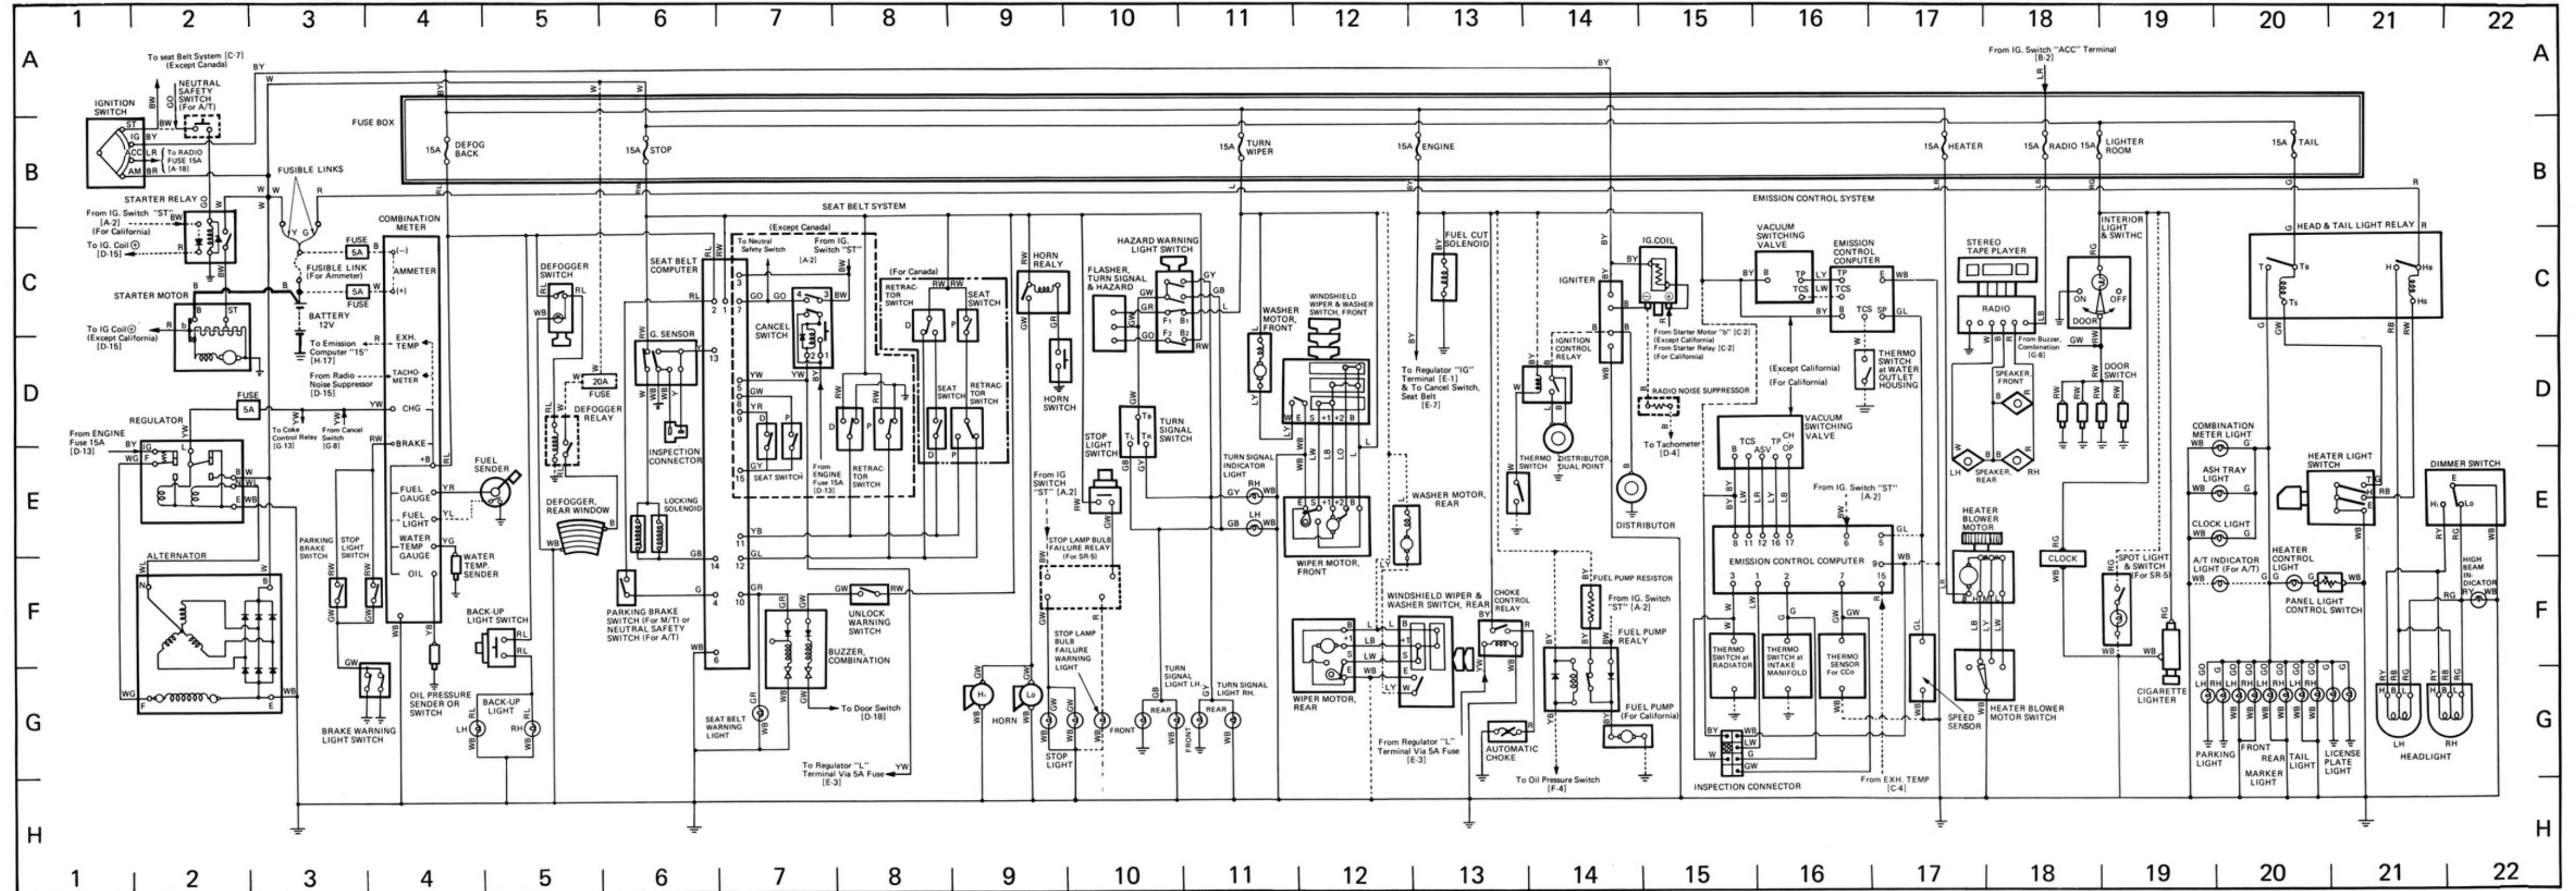

Prepared by

TOYOTA MOTOR SALES CO., LTD.

Export-Technical Department

Haruhi Plant

Haruhi-mura, Nishikasugai-gun

Aichi Pref., Japan

First Printing July, 1974

Publication No.98121

Printed in Japan

